


Mounting Instructions Picture Light Clarus LED

CAUTION! The electrical lamps have to be mounted without current and by cold state only by a specialist. Also the change of the bulbs has to be made in this state.


Assembly of the picture light:

The bracket with the red cable to the pipe end with the red dot in the LED light stick. Note polarity: Insert side with a red dot in the LED unit with a red bow on cable (+ pole).

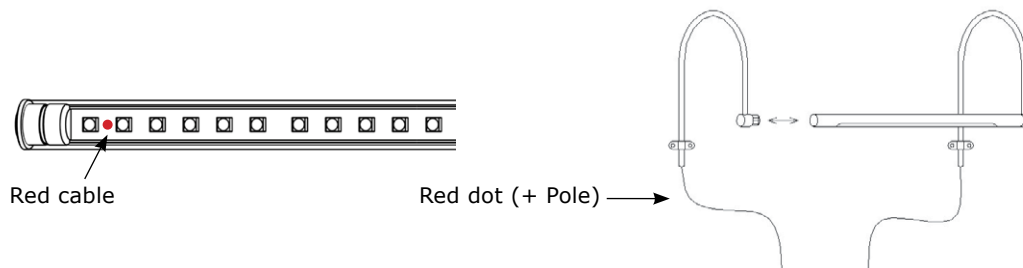


Electrical connection:

For the electrical connections are at the ends of the bracket ECGs assembled. The high-voltage connector (230 V) is connected to the ECG by qualified personnel.

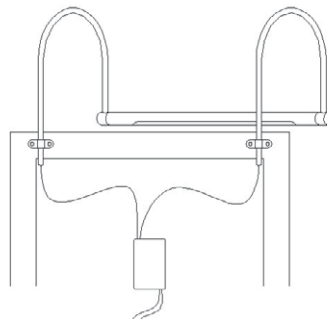

Adjustment of the illumination:

By turning the light pipe, the upper light exit plane can be matched with the image plane. Be set at the set, the LED light pipe must also glass tube.

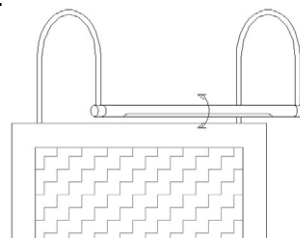

Maintenance:

This lamp is made of high quality materials with protective baking varnish. Without current clean the outside of the lamp with a duster without using chemical substances.